



## Celestial 600 & 800 OWNERS MANUAL



**Model Numbers: MZECEL600 & MZECEL800**

**AC 220-240V, 50Hz 1400-1600W**

**⚠ WARNING**

**Read the entire owner's manual, including all safety information before using this product. Failure to do so could result in fire, electric shock, or serious personal injury.**

**⚠ CAUTION**

**Keep this manual for future reference. If you sell this product, make sure this manual accompanies it.**



@ezeeglow



@ezeeglowelectricfires

Be sure to upload your fire image using #ezeeglow and tag Ezee Glow on Facebook or Instagram to feature on our social media!

Rev E

# IMPORTANT SAFETY INFORMATION!

## WARNING

**When using electrical appliances basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:**

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burning, do not touch hot surface. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 m from the front of the heater and keep them away from the sides and rear. In order to avoid overheating, do not cover the heater.
- Extreme caution is necessary when any heater is used near children or the infirm and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord, plug or after the heater malfunctions, has been dropped damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Indoor use only, do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic areas, where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert objects into ventilation or exhaust openings, as this may cause an electric shock, fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- DANGER-HIGH Temperatures may be generated under certain abnormal conditions. Do not partially or fully cover or obstruct the front of this heater.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

# IMPORTANT SAFETY INFORMATION!

## WARNING

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Children less than 3 years old should be kept away from the appliance. Children aged from 3 – 8 years shall only switch on the appliance, provided it is properly installed, have been given instruction on how to use it and understand the hazards involved. Children aged 3 – 8 shall not plug in, clean, or perform maintenance tasks on the appliance.

· CAUTION — Some parts of this product can become very hot and cause burns. Particular attention must be given when children and vulnerable people are present.

### ELECTRICAL CONNECTIONS – UK PLUG WIRING INSTRUCTION

- If the plug must be changed because it is not suitable for your socket, or due to damage, please follow the wiring instructions shown below.
- **The wires in the mains lead are coloured in accordance with the following code:**


**BROWN: LIVE (L)**

**BLUE: NEUTRAL (N)**

**GREEN/YELLOW: EARTH (E)**

*As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please see below:*

- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK.
- The BROWN wire is the LIVE and must be connected to the terminal that is marked with the letter L or coloured RED.
- The GREEN/YELLOW must be connected to the terminal which is marked E or the earth symbol or coloured GREEN or GREEN/YELLOW.
- Always ensure that the cord grip is positioned and securely fastened.
- **WARNING: THIS APPLIANCE MUST BE EARTHED.**
- **If a 13A (BS1363) fused plug is used it must be fitted with a BS1362 13A fuse. If in doubt consult a qualified electrician.**

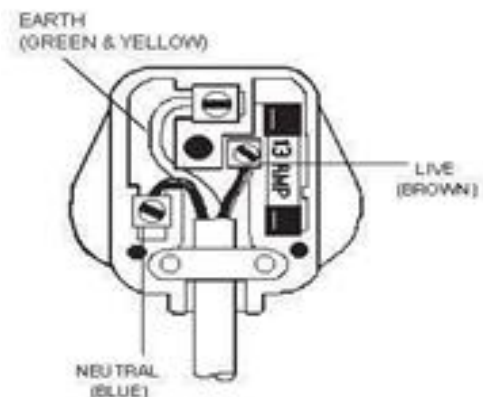

# Install preparation


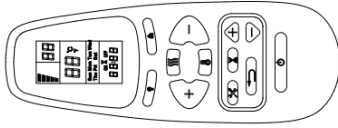

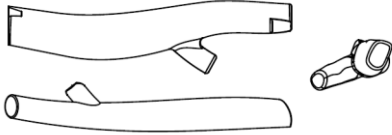







This product includes a **GLASS** panel. Use **extreme caution** when **handling**. Failure to do so could result in **personal injury** or **property damage**.


Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Check the parts list and make sure you have all the parts you need. Please recycle all packaging material at your local recycling center.

**You will need the following tools (not included):** Phillips screwdriver, drill and drill-bit set.

## Parts and Hardware

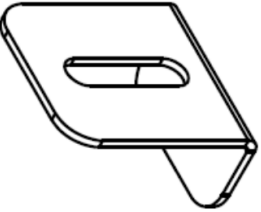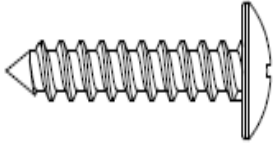		
<p><b>A – Electric fire</b></p>	<p><b>B – Remote Control</b></p>	<p><b>C- Instruction Manual</b></p>
		
<p><b>D- Artificial logs</b></p>	<p><b>E- Crystals</b></p>	<p><b>F- Charred wood flakes</b></p>
		
<p><b>G- L-shape bracket</b></p>	<p><b>H- ST4x12 Metal Screws</b></p>	<p><b>I- Feet</b></p>

# Dimensions

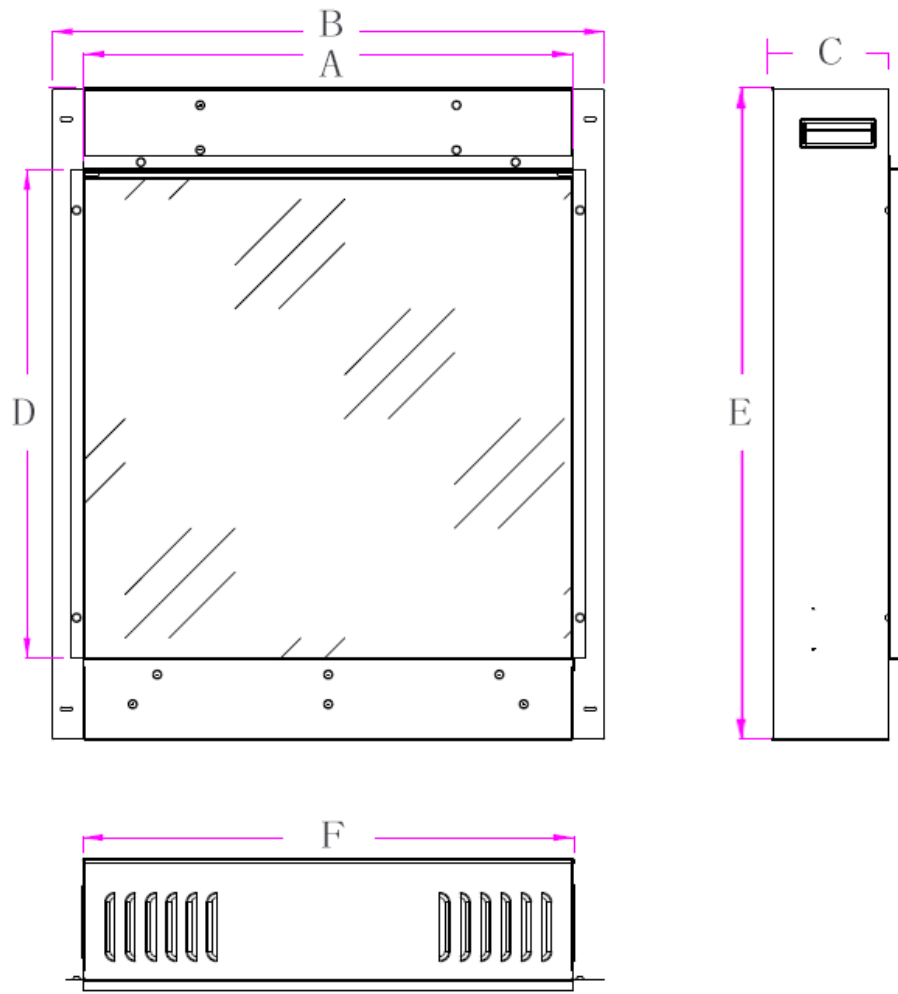

PRODUCT DIMENSIONS (mm)						
MODEL NO.	A	B	C	D	E	F
MZECCEL600	600	678	150	600	801	602
MZECCEL800	800	878	150	600	801	802


# Installation and Assembly

The appliance is a recess or surround fitted appliance. Select a suitable location that is not susceptible to moisture build-up. See below for required clearances for both Celestial 600 & 800 fires.

**NOTE: Follow all relevant local and national electrical codes.**

## MINIMUM CLEARANCES

Minimum clearances include non-combustible materials and apply to both recess fitting and surround fitting. Minimum clearances:

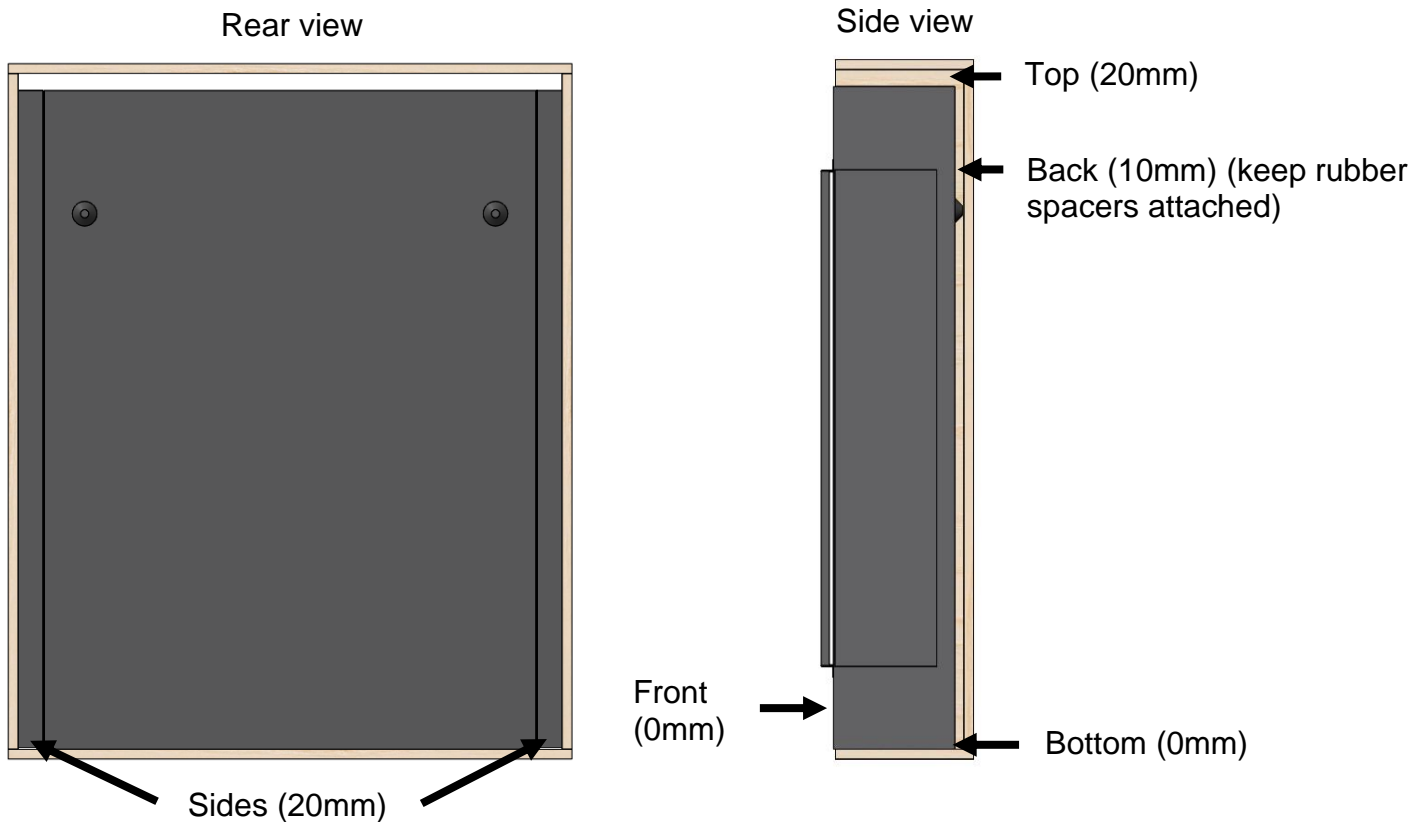

For standard 915 x 915 surround fitting, remove rubber feet and attach metal feet (**I**) to bottom of fire to assist with slip-set fitting (Metal feet installation leaflet included in packaging).

## MINIMUM CLEARANCE TO COMBUSTIBLES

All measurements taken from front, measuring from perimeter of glass screen			
Bottom	0"	Top	11.8" (300mm)
Sides	0"	Front	36" (1000mm) from heater outlet
Back	0"		

# Fuel-bed Effect Installation

## Note:

The appliance must be installed in its final location before the crystals, artificial logs and charred wood pieces are installed.

1. While supporting the glass, remove the screws holding the front glass screen in place. Remove the glass and safely store it to one side for now. **See page 12.**
2. Disperse the crystals evenly on the fuel-bed tray in a side-to-side motion. **Figure 1.** Next, using the same side-to-side technique, disperse most of the charred flakes onto the surface of crystals. Save some for later.
3. Place the artificial logs on the surface of the crystals, leaving a gap underneath so the fire effect is visible. **Figure 2.** To enhance the bed further, disperse the remainder of the charred wood flakes in and around each log.
4. Finally, when content with your fuel-bed, re-fit the glass screen **See page 12,** switch the fire on and relax.



Figure 1.



Figure 2.

# Operation



Please read the entire owner's manual, including **all safety information**, before plugging in or **using** this product. Failure to do so could result in **electric shock, fire, serious injury, or death.**



## Power

Plug the power cord into a 220-240V 50Hz outlet (see **IMPORTANT SAFETY INFORMATION** on **Pages 2 and 3**). Make sure the outlet is in good condition and the plug isn't loose. **NEVER** exceed the maximum amperage for the circuit. **DO NOT** plug other appliances into the same circuit.


## Methods of Operation

The electric fire can be operated by the control panel located on the front of the unit or the remote control. **See figures below.**

Before operating, please review the **IMPORTANT SAFETY INFORMATION** on **Pages 2 and 3.**

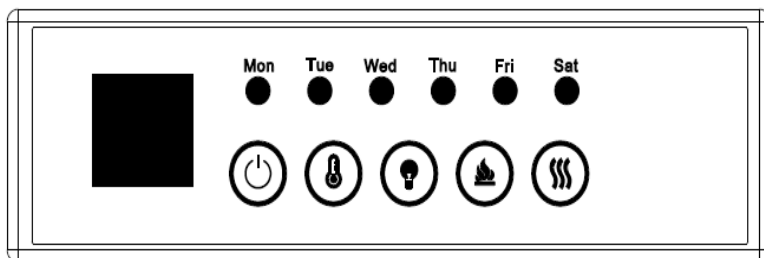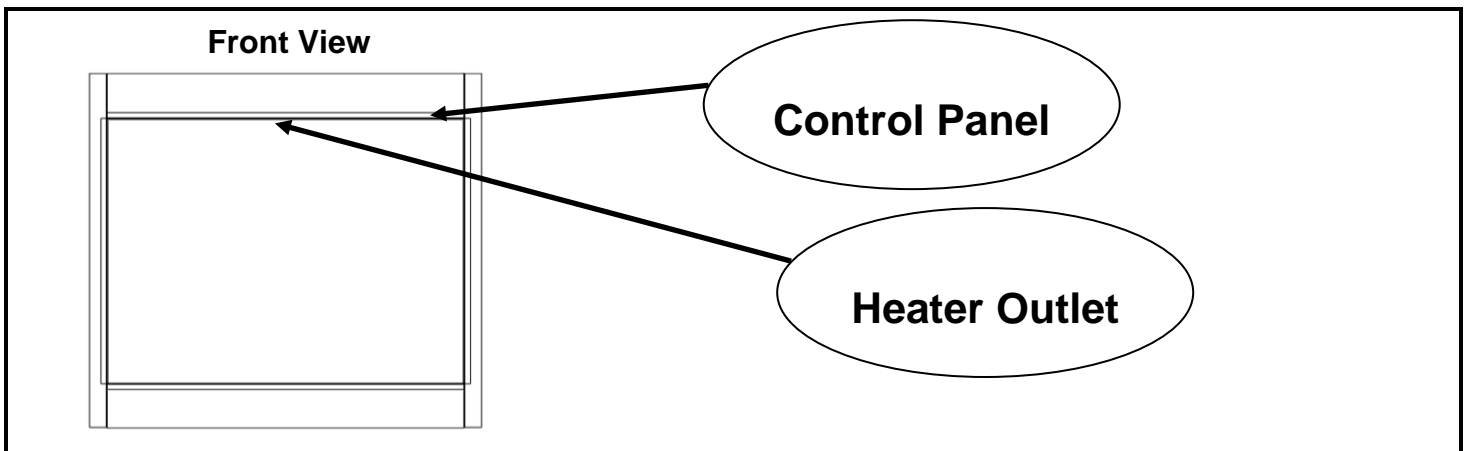



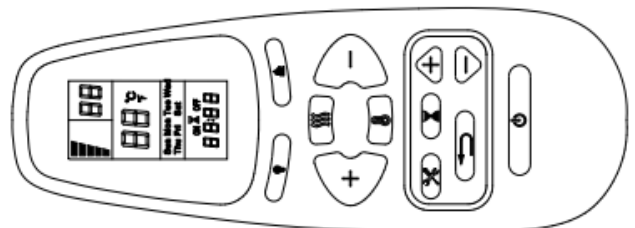


Control panel




Remote control







## Control Panel Operation


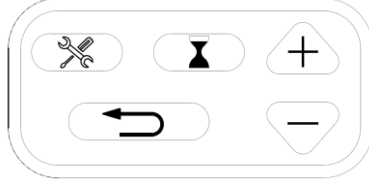


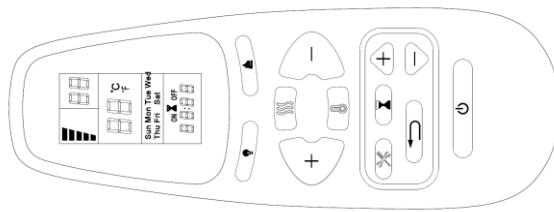

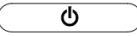

BUTTON	FUNCTION	ACTION & INDICATION
 <b>POWER</b>	<p><b>ON:</b> Enables control panel functions and remote control. Turns on flame effect.</p> <p><b>OFF:</b> Disables control panel functions and remote control. Turns off flame effect.</p>	<ol style="list-style-type: none"> <li>1. <b>Press once</b>, indicator light turns on. Power turns on. All functions enabled.</li> <li>2. <b>Press again</b>, flame effect turns off. Power and all functions turn off.</li> </ol>
 	<p><b>FLAME button:</b> Adjusts flame brightness.</p> <p><b>NOTE:</b> Flame effect stays on until power button is turned off. Flame effect must be on for heater to turn on.</p>	<ol style="list-style-type: none"> <li>1. <b>Press once</b>, indicator light turns on. Flame brightness changes.</li> <li>2. <b>Press again</b>, until desired brightness is selected.</li> </ol>
 	<p><b>COLOUR button:</b> Adjusts the flame colour.</p> <p><b>NOTE:</b> Colour effect stays on until power button is turned off. Colour flame effect must be on for heater to turn on.</p>	<ol style="list-style-type: none"> <li>1. <b>Press once</b>, indicator light turns on. Flame colour changes.</li> <li>2. <b>Press again</b>, until desired colour is selected.</li> </ol>
 <b>HEATER</b>	<p><b>HEATER button:</b> Turns heater on and off.</p> <p><b>NOTE:</b> The heater only works when the flame effect is on. If the flame effect is off, the heater will not turn on.</p> <p><b>NOTE:</b> To prevent overheating, the heater blows cool air for 10 seconds before the heater turns on, and after it turns off.</p> <p><b>NOTE:</b> Heater overrides room temp control.</p>	<ol style="list-style-type: none"> <li>1. <b>Press once</b>, indicator light turns on. Fan blows cool air for 10 seconds. Low heater (H1) turns on and blows warm air.</li> <li>2. <b>Press again</b>, indicator light remains on. High heater (H2) turns on and blows hot air.</li> <li>3. <b>Press again</b>, indicator light turns off. Fan blows cool air for 10 seconds, then turns off.</li> </ol>
 <b>TEMP</b>	<p><b>TEMPERATURE button:</b> Turns heater on and off to maintain room at a certain temperature.</p> <p><b>NOTE:</b> Press &amp; hold the button for 5 seconds, the temperature setting will switch from °C to °F and vice versa.</p>	<ol style="list-style-type: none"> <li>1. <b>Press once</b>, indicator light turns on. Temperature is preset at 18 °C.</li> <li>2. <b>Press again</b>, until desired room temperature is selected.</li> </ol>


## Remote Control Operation







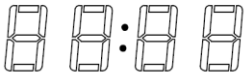


BUTTON	FUNCTION	ACTION & INDICATION
 <b>POWER</b>	<p><b>ON:</b> Enables control panel functions and remote control. Turns on flame effect.</p> <p><b>OFF:</b> Disables control panel functions and remote control. Turns off flame effect.</p>	<ol style="list-style-type: none"> <li><b>Press once</b>, indicator light turns on. Power turns on. All functions enabled.</li> <li><b>Press again</b>, flame effect turns off. Power and all functions turn off.</li> </ol>
 <b>COLOUR</b>	<p><b>COLOUR button:</b> Adjusts the flame colour.</p> <p><b>NOTE:</b> Colour effect stays on until power button is turned off. Colour flame effect must be on for heater to turn on.</p>	<ol style="list-style-type: none"> <li><b>Press once</b>, indicator light turns on. Flame colour changes.</li> <li><b>Press again</b>, until desired colour is selected.</li> </ol>
 <b>FLAME</b>	<p><b>FLAME button:</b> Adjusts flame brightness.</p> <p><b>NOTE:</b> Flame effect stays on until power button is turned off. Flame effect must be on for heater to turn on.</p>	<ol style="list-style-type: none"> <li><b>Press once</b>, indicator light turns on. Flame brightness changes.</li> <li><b>Press again</b>, until desired brightness is selected.</li> </ol>
 <b>HEATER</b>	<p><b>HEATER button:</b> Turns heater on and off.</p> <p><b>NOTE:</b> The heater only works when the flame effect is on. If the flame effect is off, the heater will not turn on.</p> <p><b>NOTE:</b> To prevent overheating, the heater blows cool air for 10 seconds before the heater turns on, and after it turns off.</p> <p><b>NOTE:</b> Heater overrides room temp control.</p>	<ol style="list-style-type: none"> <li><b>Press once</b>, indicator light (H1) turns on. Fan blows cool air for 10 seconds. Low heater (H1) turns on and blows warm air.</li> <li><b>Press again</b>, indicator light changes to H2. High heater (H2) turns on and blows hot air.</li> <li><b>Press again</b>, indicator light turns off. Fan blows cool air for 10 seconds, then turns off.</li> </ol>

## TIMER SETTINGS ON REMOTE CONTROL





 : <b>Timer:</b> Displays current day, time, and week. Press to enter or confirm timer settings.		
 : <b>Settings:</b> Press to move to next step. Press to confirm week timer.		
 : <b>Back:</b> Press to clear timer settings. Press to return to the previous step.		
 : <b>Up and Down</b> Press to increase/ decrease certain settings.		
<b>LCD Screen</b>		
<b>Weekday</b>  Mon, Tues, Wed, Thurs, Fri, Sat, Sun	<b>ON OFF</b> 	<b>Note:</b> The functions can only be adjusted when the related letters or digits are flashing. <b>Note :</b> Calibrate the timer to current time before entering the weekly settings.
<b>Time Display</b>  Current Time / Timer From 00:00 to 24:00 NOTE: 00-12:00 is AM / 13:00-24:00 is PM	<b>Sun Mon Tue Wed Thu Fri Sat</b>	

 <b>TEMP</b>	<b>TEMPERATURE button:</b> Turns heater on and off to maintain room at a certain temperature.	<ol style="list-style-type: none"> <li>1. <b>Press once</b>, indicator light turns on. Temperature is preset at 18 °C.</li> <li>2. <b>Press again</b>, until desired room temperature is selected.</li> </ol>
	<b>NOTE:</b> Press & hold the button for 5 seconds, the temperature setting will switch from °C to °F and vice versa.	

### 1 Set current day and time

1. Press  once. When "MON" (Monday) begins flashing, use  to select the current day.
2. Press . When the hour digits begin flashing, use  to select the current hour.
3. Press  again. When the minute digits begin flashing, use  to select the current minute.
4. Press  again. The current time is now set.

### 2 Set ON/OFF time and temperature on a weekly cycle

1. Press . When "MON" begins flashing, press  3 times. When "ON" begins flashing, use  to select the desired hour and minute to turn on the heater. Press  at any time to clear the digits and shut down "ON" timer.

**note:**

The timer can only be adjusted in 30-minute intervals (i.e. 00:00 - 00:30; 00:30 - 01:00, etc.)

- Press . When "OFF" begins flashing, use to select the desired hour and minute to turn off the heater. Press at any time to clear the digits and shut down "OFF" timer.
- Press again. When "18" begins flashing, use to select the desired temperature for Monday.

**note:**

If the temperature was previously set, those digits will be shown instead of "18".

- Press again. When "TUES" appears on the screen and "ON" begins flashing, use to select the desired hour and minute to turn on the heater for Tuesday.
- Press again. When "OFF" begins flashing, use to select the desired hour and minute to turn off the heater for Tuesday.
- Press again. When "18" begins flashing, use to select the desired temperature for Tuesday.
- Repeat steps 1 to 6 to set the "ON/OFF" time and temperature for Wednesday, Thursday, Friday, Saturday, and Sunday.
- Press or to finish, ensuring to aim the remote control at the receiver located in the middle of the appliance. The appliance will "beep" once to confirm your settings have been saved successfully.

## Open window warning

If the room temperature decreases by 10 degrees within 3 minutes, the appliance will assume there is an open window nearby. In order to conserve energy, the heater will automatically switch from High Heat to Low Heat, or if the heater is already at Low Heat, it will turn off completely.

When switching from High Heat to Low Heat, the appliance will beep 3 times and the digital display will flash "88" 3 times before displaying the existing heating status.

When switching from Low Heat to Off, the appliance will beep 3 times and the digital display will flash "88" continuously.

To reset the heating function, see "operating remote control" section.

### NOTICE

When the heater is first turned on, a slight odor may be present. This is normal and won't occur again unless the heater is un-used for a long period of time.

### NOTICE

To improve operation, **aim** the remote control at the front of the fireplace. **DO NOT press the buttons too quickly.** Give the unit time to respond to each command.

## Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF. To reset:

- Unplug the power cord from the outlet.
- Turn the ON/OFF switch on the CONTROL PANEL to OFF. **Wait 5 minutes.**
- Inspect the fire unit and make sure all vents are free from dust or lint. If they are clogged, use a vacuum to clean the vent areas.
- With the POWER switch in the OFF position, plug the power cord back into the outlet.
- If the problem continues, have your outlet and wiring inspected by a professional.

## Remote Control Battery Information

- This remote control uses **Two AAA batteries (NOT included)**.



**NEVER** dispose of batteries in **fire**. Failure to observe this precaution **may result in explosion**. Dispose of batteries at your local hazardous material processing center.

## Care and Maintenance

### Cleaning



**ALWAYS** turn the heater **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in **electric shock, fire, or personal injury**.



**NEVER** immerse in water or **spray with water**. Doing so could result in **electric shock, fire, or personal injury**.

#### Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- **DO NOT** use brass polish or household cleaners as these products will damage the metal trim.

#### Glass:

- Use a good quality glass cleaner sprayed onto the cloth or towel. Dry thoroughly with a paper towel or lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

#### Vents:

- Use a vacuum or duster to remove dust and dirt from the heater and vent areas.

#### Plastic:

- Wipe gently with a damp cloth and a mild solution of dish soap and warm water.  
**NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

## Maintenance



**Risk of electric shock! DO NOT OPEN any panels. No user-serviceable parts inside!**



**ALWAYS** turn the heater **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance or moving the fire unit. Failure to do so could result in **electric shock, fire, or personal injury**.

#### Electrical and Moving Parts:

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are serviceable by a trained electrician.

# Troubleshooting/ FAQ

<b><u>Problem</u></b>	<b><u>Possible Cause</u></b>	<b><u>Solution</u></b>	<b><u>Note</u></b>
<b>Fire not turning on</b>	Fire not plugged in or switched on at socket	Check plug is correctly fitted into socket and the socket is turned on.	If all solutions have been tested and problem persists, a new control panel is required.
	Fuse blown	Disconnect plug and inspect the fuse. Replace with a 13A fuse if broken.	
	Faulty control panel	If the controls do not work, press each control continuously one at a time. After a few cycles, the controls should recognize the input and work correctly.	
<b>Noisy heater</b>	Fan clogged	Remove the heating unit and remove dust from fan.	If all solutions have been tested and problem persists, a new heating element/fan assembly is required.
	Fan unbalanced/catching on housing	Manually re-center fan on each side. Check fan is not warped or damaged.	
<b>Heater only blowing cold air</b>	Fan clogged	Remove the heating unit and remove dust from fan.	If all solutions have been tested and problem persists, a new heating element/fan assembly is required.
	Faulty heating element	Inspect the heating element and make sure all wires are firmly connected.	
	Faulty fan motor	Fan may be rotating too slow.	
<b>No flame picture/partial flame picture</b>	Loose connection	Ensure all wires are connected firmly.	If all solutions have been tested and problem persists, a new PCB is most likely required.
	LED blown (If partial flame picture)	Test the faulty LED strip using another LED power connector that you know works. If LED strip still doesn't work, the fault is most likely with the LED strip and not the PCB.  New LED strip required.	
	Damaged PCB	New PCB required.	

<b>Heater cutting out</b>	Build-up of hot air	Ensure inlets and outlet are free from obstruction and there are sufficient clearances surrounding the unit.	If problem persists, the installation will need assessed to ensure it adheres to all required minimum clearances as stated in this manual.
	Thermostat setting causing heater to cut-out	Adjust thermostat setting to maintain desired room temp or deactivate thermostat setting.	-
<b>Heater switching on without activation</b>	Thermostat set to keep room at certain temperature.	Adjust thermostat setting to maintain desired room temp or deactivate thermostat setting.	If all solutions have been tested and problem persists, a new PCB is required.
	Thermostat faulty	Replace PCB	

**NOTE: Wiring and exploded diagrams to assist with fire repair are available on request.**



## **WEEE :**

### **Meaning of crossed-out wheeled dustbin:**

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, **the retailer is legally obligated to take back your old appliance for disposal, free of charge.**

### **Manufacturer's name:**

Micon Distribution Ltd.

### **Manufacturer's address:**

1a Hallstown Road, Ballinderry Upper,  
Lisburn, BT28 2NE



### **Product Warranty**

**Your product is guaranteed for one year from the date of purchase.**

Should this product prove defective within one year of purchase due to a design fault, workmanship or material breakdown, the product will be repaired or replaced free of charge.

Product warranty is subject to the following conditions:

- The product is to be used for domestic purposes only in accordance with the operating instructions.
- Responsibility of proof of purchase lies with the end user(s), who must prove product purchase within 12 month period of claim date.
- All warranties, will be invalidated if unauthorised repairs or modifications are made to the electric fire, or in case of accident, misuse or damage caused by improper installation, or to damage occurring during transit to or from the repairer and altered or missing serial numbers.
- This Warranty does not apply to Heating elements, Bulbs or fuses within the product.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee

**Should you require after sales information or warranty assistance within UK & Ireland with this product please go to <https://www.micon-dist.com/>.**

Imported and Distributed by Micon Distribution Ltd. 1a Hallstown Road, Ballinderry Upper, Lisburn BT28 2NE. Ezee Glow Brand exclusively owned by Micon